


# Transition to cast iron

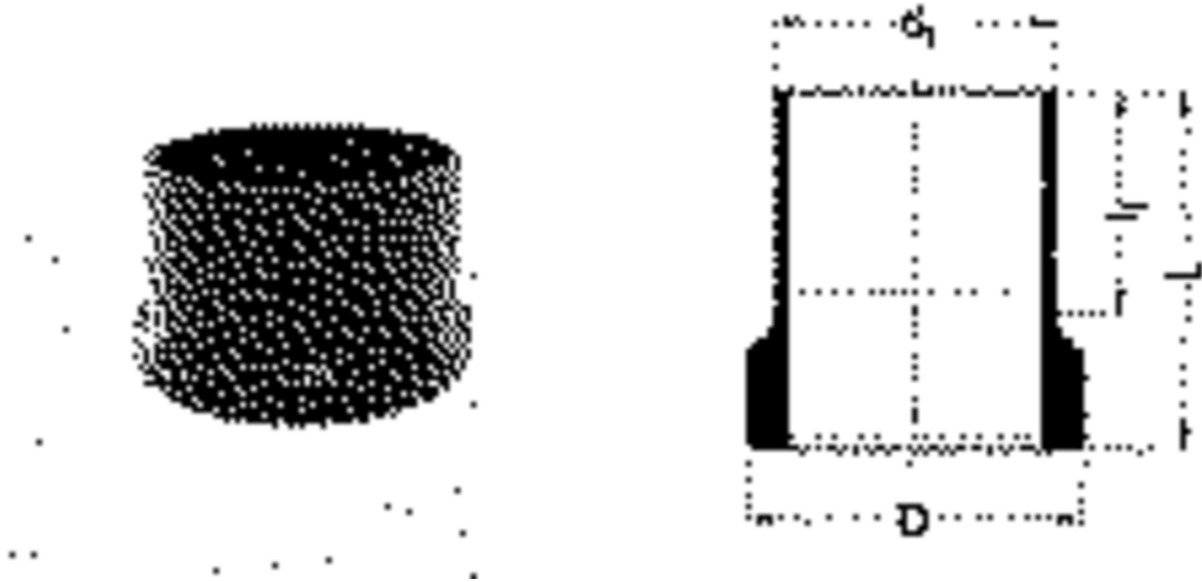

Reference	Name	tooltiplmage	D	L	π
56 20 50	Transition to cast iron	-	212	160	80
56 25 50	Transition to cast iron	-	274	160	115
56 31 50	Transition to cast iron	-	326	160	115