


Expansion socket with anchor point With protection plug

The expansion sockets can absorb length changes of pipes with a max. length of 6 m. A temperature difference of 10°C will result in expansion or contraction of 8 mm. The insertion depths at ambient temperature of 0°C and 20°C are indicated on the sockets.

Expansion sockets d75–315 mm of type A have an integrated anchor point, that is able to incorporate extension of the 5 meter down pipe.

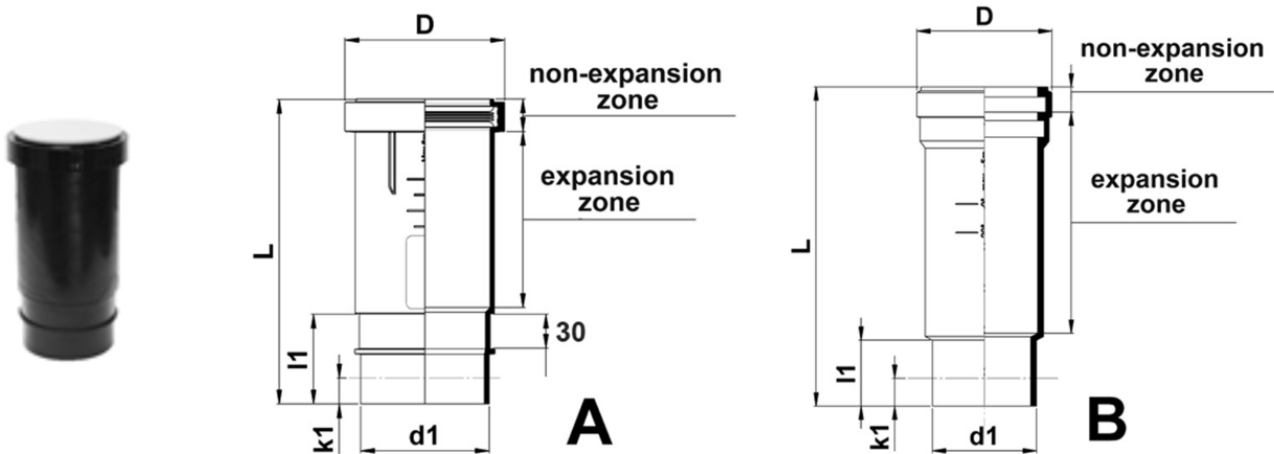

Reference	Name	tooltiplmage	d1	b	Type	D	L	l1	noteEnum	noteText	note2Text	product.detail.attribute.note3Text
400420	Expansion socket with anchor pointWith protection plug	-	40	-	B	56	172	35	1	SBR seal	butt-weld only	without protection plug - butt-weld only
400520	Expansion socket with anchor pointWith protection plug	-	50	-	B	65	172	35	1	SBR seal	butt-weld only	without protection plug - butt-weld only
400620	Expansion socket with anchor pointWith protection plug	-	63	-	B	80	155	15	2	SBR seal	butt-weld only	without protection plug - butt-weld only
402020	Expansion socket with anchor pointWith protection plug	-	200	-	B	240	300	55	3	SBR seal	butt-weld only	without protection plug - butt-weld only

Expansion socket with anchor pointWith protection plug

Reference	Name	tooltiimage	d1	b	Type	D	L	l1	noteEnum	noteText	note2Text	product.detail.attribute.note3Text
402520	Expansion socket with anchor pointWith protection plug	-	250	-	B	298	300	55	3	SBR seal	butt-weld only	without protection plug - buttweld only
403120	Expansion socket with anchor pointWith protection plug	-	315	-	B	372	355	68	3	SBR seal	butt-weld only	without protection plug - buttweld only
405620	Expansion socket with anchor pointWith protection plug	-	56	-	B	72	172	35	1	SBR seal	butt-weld only	without protection plug - buttweld only
420720	Expansion socket with anchor pointWith protection plug	-	75	30	A	98	255	72	1	SBR seal	butt-weld only	without protection plug - buttweld only
420920	Expansion socket with anchor pointWith protection plug	-	90	30	A	114	255	72	1	SBR seal	butt-weld only	without protection plug - buttweld only
421120	Expansion socket with anchor pointWith protection plug	-	110	30	A	135	260	76	1	SBR seal	butt-weld only	without protection plug - buttweld only
421220	Expansion socket with anchor pointWith protection plug	-	125	30	A	152	260	76	1	SBR seal	butt-weld only	without protection plug - buttweld only
421620	Expansion socket with	-	160	30	A	186	266	76	1	SBR seal	butt-weld only	without protection plug - buttweld only

Expansion socket with anchor point With protection plug

Reference	Name	tooltiplmage	d1	b	Type	D	L	l1	noteEnum	noteText	note2Text	product.detail.attribute.note3Text
	anchor pointWith protection plug											
422020	Expansion socket with anchor pointWith protection plug	-	200	30	A	240	435	180	1	SBR seal	butt-weld only	without protection plug - buttweld only
422520	Expansion socket with anchor pointWith protection plug	-	250	40	A	298	460	200	1	SBR seal	butt-weld only	without protection plug - buttweld only
423120	Expansion socket with anchor pointWith protection plug	-	315	40	A	372	495	235	1	SBR seal	butt-weld only	without protection plug - buttweld only

¹ SBR seal

² butt-weld only

³ without protection plug - buttweld only