


KBS

Installation kits for Ball Valves and Tapping Ball Valves (Standard and Top-Loading)

Telescopic actuating rod for operation of the FRIALEN KHP, KH, KHW, AKHP and AKHP TL from the valve cover. Stepless adjustment in the stated range (RD) without the use of tools, even in the installed state. Self supporting in any extended position. Corrosion proof. Please note that the wrench size is 14 mm.



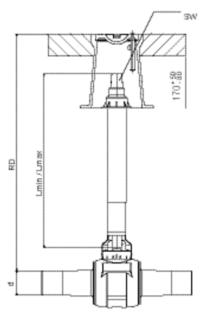

	Κωδικός προϊόντος	d	RD in m	вх	PU	I _{min}	I _{max}	sw	Weight kg
1	615741	20-50	0,45 - 0,7	1	42	398	543	30	1,800
1	615957	20-50	0,6 - 1,0	1	42	548	843	14	2,700
1	615328	20-50	0,6 - 1,0	1	42	490	785	30	2,000
1	616466	20-50	1,0 - 1,5	1	42	759	1303	14	3,400
1	615330	20-50	1,0 - 1,5	1	42	799	1343	30	3,400
1	616068	20-50	1,2 - 2,0	1	42	991	1785	14	3,450
1	615329	20-50	1,2 - 2,0	1	42	1049	1843	30	3,650
	615958	63-225	0,6 - 1,0	1	42	537	812	14	2,050
	615310	63-225	0,6 - 1,0	1	42	490	785	30	3,050
	616467	63-225	1,0 - 1,5	1	42	746	1272	14	4,150
	615331	63-225	1,0 - 1,5	1	42	786	1312	30	4,150
	616069	63-225	1,2 - 2,0	1	42	980	1754	14	3,600
	615311	63-225	1,2 - 2,0	1	42	1038	1812	30	5,250

 $^{^{\}rm 1}$ Solid fit of the pipe sleeve socket due to the covered housing design.

Key width $\mathrm{SW}_1\,\mathrm{14}~\mathrm{mm}$ for use as house connection fitting

Other length on request.

For full-port passage ball valve KH d50 select version BS d63-225





KBS

Installation kits for Ball Valves and Tapping Ball Valves (Standard and Top-Loading)

Areas of Application

Telescopic actuating linkage for operation of the FRIALEN KHP, KH, KHW, AKHP und AKHP-TL from the street cap.

Assembly Instructions

Before fusion, the FRIALEN KHP, KH, KHW, AKHP and AKHP-TL must be aligned to suit the type of actuation intended, in order to ensure that the installation kit BS will seat correctly.

Good reasons for using the FRIALEN-Installation kits BS:

Protective pipe of polyethylene protects from intrusion of sand or soil

Assembly without tools

Self supporting in any extended position

Safe from being pulled out

Corrosion proof

Telescope assembly set can be adjusted even once in place and filled

Constructive harmonizing of the transferable torque onto the FRIALEN-Ball Valve

Connection pins made from stainless steel

Coloured marking disk for use with gas and water

Parts of the protective pipe are fully welded together

