


CMIM/CP NC - Pneumatically actuated compact diaphragm valve DN 12:15

Pneumatically actuated compact diaphragm valve with metric plain socket ends for socket welding, Normally Closed.



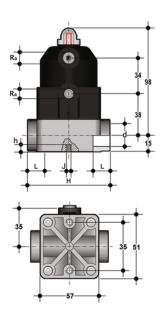

EPDM

Reference	system	Category	family	series	d	DN	PN	Ra	L	н	h	J	g
CMIMNC016E	Automation system	Pneumatically actuated valves	Diaphragm valves	CM/CP DN 12÷15	16	12	6	G 1/4"	14	75	8	M5	300
CMIMNC020E	Automation system	Pneumatically actuated valves	Diaphragm valves	CM/CP DN 12÷15	20	15	6	G 1/4"	16	75	8	M5	300

FKM

Reference	system	Category	family	series	d	DN	PN	Ra	L	Н	h	J	g
CMIMNC016F	Automation system	Pneumatically actuated valves	Diaphragm valves	CM/CP DN 12÷15	16	12	6	G 1/4"	14	75	8	M5	300
CMIMNC020F	Automation system	Pneumatically actuated valves	Diaphragm valves	CM/CP DN 12÷15	20	15	6	G 1/4"	16	75	8	M5	300

PTFE

Reference	system	Category	family	series	d	DN	PN	Ra	L	н	h	J	g
CMIMNC016P	Automation system	Pneumatically actuated valves	Diaphragm valves	CM/CP DN 12÷15	16	12	6	G 1/4"	14	75	8	M5	300
CMIMNC020P	Automation system	Pneumatically actuated valves	Diaphragm valves	CM/CP DN 12÷15	20	15	6	G 1/4"	16	75	8	M5	300





CMIM/CP NC - Pneumatically actuated compact diaphragm valve DN 12:15

The new compact and light piston actuator in PP-GR makes the CM/CP the ideal choice for applications requiring very frequent valve operation and a long valve lifetime.

- Compact and lightweight piston actuator in PP-GR, free of exposed metallic parts, particularly suited for use in severe environmental and chemically aggressive conditions.
- High strength IXEF piston guarantees high reliability over time without maintenance.
- · High visibility graduated optical position indicator protected by a transparent cap with a seal O-Ring.
- · The valve is impervious to fluids containing impurities
- · It has an high flow rate
- · It can be installed in any position
- · It has an extremely compact structure
- It is actuated by a dry running piston and does not require maintenance
- It has no protruding screws and is fully free of impurity deposits
- · Allows for an easy diaphragm seal replacement
- The Standard version valve comes with a position indicator.

