

RSV

Repair and reinforcement saddle, SDR11


Repair and reinforcement saddle RSV SDR 11

- Gas, water and H₂
- Working pressure: MOP (gas) 10 bar, PFA (water) 16 bar
- Material: PE 100
- 2 combined saddle components
- Safety technology

Note:

Only apply to minor pipe damage.

The damage must be located within the repair area and not in the fusion zone.

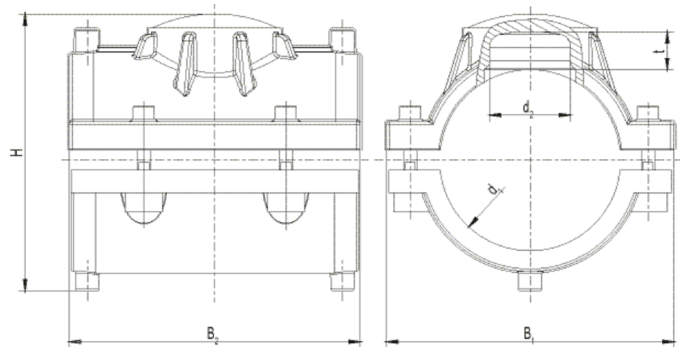

PE 100 SDR 11

Maximum permissible working pressure 16 bar (water) / 10 bar (gas)



Reference	d ₁	d ₂	BX	PU	t	H	B1	Weight kg
615164	90	50	24	192	21	148	155	0,930
615165	110	50	16	128	21	170	178	1,160
615166	125	50	15	120	21	183	190	1,370
615168	160	50	10	80	21	218	225	1,680
615169	180	50	6	48	21	238	240	1,810
615170	200	50	5	40	21	258	250	1,860
615171	225	50	5	40	21	283	255	1,910

FRIALEN safety fittings can be fused with SDR levels 11 to 17.6. Other levels of SDR can be processed on request. Please note the mandatory labels directly on the product. DVGW test mark issued: DV-8606AU2249

Repair and reinforcement saddle, SDR11

Areas of Application

The FRIALEN-Repair and Reinforcing Saddles are used for the repair of minor pipe damages.

Assembly Instructions

The fusion of the HD-PE pipe with the FRIALEN-Repair and Reinforcing Saddle takes place by FRIALEN-fusing – leakproof and longitudinally strong.

In order to avoid discharge of media, the leak has to be sealed with a separate plug ($\leq d_2$).

Both HD-PE saddles have to be prepared according to the general installation instructions (see "Assembly Instructions" for "FRIALEN-Safety Fittings for house connections and distribution pipes up to d 225"). This includes removing the oxide layer and cleaning the pipe covered by the saddles.

Good reasons for using the FRIALEN-VVS:

- Compact construction
- HD-PE saddle with exposed heating element for optimal heat transfer
- Sealing area free of heating wires
- Preassembled unit without loose parts
- Extra wide fusion zone
- Additional barcode for tracing back the fitting (Traceability-Coding)